

Uniden®

MK800W **DECT MIC**

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

The MK800W is **NOT** waterproof or water-resistant. Keep it away from water and do not let it get submerged in water. If the mic gets wet, power it off and dry off the casing.

Keep out of prolonged exposure to direct sunlight. Prolonged exposure could heat the internal workings of the mic past safe levels.

Features

- Speaker and Microphone in a single unit
- Secure Sync
- Push-To-Talk Control Button
- Volume UP/Down Controls
- Auto power-off
- Three-color LED control
- Find button
- Up to 100 meter range
- Belt clip
- Car charger plug with mini-USB connection

What's in the Box?

- MK800W Microphone
- MK800W Cradle with mounting screws
- DC Charger (Car charger plug with mini-USB connection)
- Ni-MH battery (BT-652)
- Belt Clip
- If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!
- Need help? Get answers at our website:
www.uniden.com.au for Australian model
www.uniden.co.nz for New Zealand model.

CONTROLS & INDICATORS



Compatible Uniden UHF CB Radio

- UH7740NB
- UH7750NB
- UH8050NB
- UH8070NB
- UH8080NB

Microphone LED Definitions

Colour	Status	Meaning
Green	Solid On	Linked, battery charged
Red	Solid On	Linked, low battery
All	Off	Powered down
Green	Long Flash	Transmitting, battery charged
Red	Long Flash	Transmitting, low battery
Green	Short Stutter	Registration mode, battery charged
Red	Short Stutter	Registration mode, low battery
Orange/Green	Short Flash	Not linked, battery charged
Orange/Red	Short Flash	Not linked, low battery
Green/Red	Long Flash	Charging, battery not full
All	Long Flash	Unregistered

Setting Up Your Microphone

To...	Do This...
Install batteries in Mic	<ol style="list-style-type: none">1. Remove the back battery cover.2. Insert the Ni-MH battery, connecting it to the mic at the plug.3. Replace the back cover.4. Use the DC charger to charge battery completely before using.
Mount the microphone cradle	<ol style="list-style-type: none">1. Mount the cradle using the supplied screws.2. Disconnect the current wired mic. <i>If your Uniden UHF-CB has a secondary mic jack, you can connect the microphone cradle without disconnecting the current mic.</i>3. Connect the microphone cradle.4. Turn on UCB. The cradle LED flashes red while it powers up, then becomes solid red.

Install the belt clip (if using)	If you are using the belt clip, slide it onto the belt clip knob on the back of the mic.
----------------------------------	--

Using Your Microphone

To...	Do This...
Turn on the Microphone	Press PTT or POWER ON/OFF. The LED turns green, indicating that the mic is on.
Transmit and Receive	<p>Press PTT to transmit. Release PTT to listen for a response. The PTT button is located on the side of the mic.</p> <p>If the wireless connection is lost, the mic sounds an error tone if PTT is pressed.</p> <p>The mic only operates when it is in range. If it is out of range for 2 minutes, it automatically powers down.</p>
Increase/Decrease Volume	Press ▲ to increase or ▼ to decrease the volume in 16 step increments. When you reach the 16th step in either direction, an error tone sounds.
Find a Lost Microphone	<ol style="list-style-type: none"> 1. Press FIND on the cradle. 2. When you locate the mic, press FIND on the cradle again or any key on the mic. 3. The tone times out after 1 minute.
Turn off the Microphone	The microphone will automatically turn off after 2 minutes of inactivity.

Automatic Power Off

When you turn off the car, the UCB is also turned off. If the wireless mic has not been turned off, press Power On/Off to turn it off; otherwise, it will automatically power off after 2 minutes.

The wireless mic will also power off if the mic is out of range for 2 minutes.

Sync Mic with Cradle

Your mic is already synced with the cradle at the factory. However, if the mic unsyncs from the cradle for any reason, it will not key up the UCB when you press PTT. To synchronize the mic with the cradle:

1. Press and hold FIND/SYNC on the base for 5 seconds. The red LED will rapidly flash.
2. Press and hold both ▲ and ▼ on the microphone for 5 seconds. The microphone will beep and the indicator will rapidly flash.

Within 15 seconds, the cradle and microphone will synchronize. The microphone will sound a beep and the LED will turn solid green.

Turn Off all Features Except Charging

1. While the battery pack charges in the mic, press and hold Power On/Off for about 5 seconds.
2. The mic beeps.
3. After the battery is charged, the LED alternately flashes orange and green.

There are three methods to turn the features back on. You can press Power On/Off or you can press PTT. You can also disconnect the mini-USB cable, and then reconnect it.

Specification

Speaker Output: 8 ohm

Operating Temp.: -10°C - 50°C (0°C ~ 45°C Charge)
14°F ~ 122°F (32°F ~ 113°F Charge)

Storage Temp.: -20°C ~ 60°C (-4°F ~ 140°F)

Ni-MH battery - BT-652

Typical Battery Life: 8 hours

DC Charger Power Input: 12 - 24V DC

Digital Format: DECT

Frequency Band: 1,880 - 1,900MHz

WARRANTY

UNIDEN MK800W

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

Terms of Warranty: Uniden Aust/NZ warrants to the original retail purchaser only that the MK800W (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone: 1300 366 895
Email: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone: (09) 273 8377
Email: service@uniden.co.nz

Uniden®