

# Uniden®

## **iGO CAM 820** **Accident CAM** **Vehicle Recorder**

---

For more exciting new products please visit our website:

Australia: [www.uniden.com.au](http://www.uniden.com.au)

New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)

---

# OWNER'S MANUAL

# Important Safety Instructions

---



NOTE

Uniden does not represent this product to be waterproof. Do not expose this product to Rain or Moisture.



NOTE

This product is intended for use in a motor vehicle. Don't install the device where it will block the driver's view of the road (including the mirrors!) or the deployment of the airbag.



NOTE

***Keep your attention on the road!*** Don't try to operate or focus on any device while driving. If you have to concentrate on a device, pull off the road for a few minutes.



NOTE

Ensure that the camera lens is kept clean and there is nothing blocking the lens.



NOTE

Don't leave the device in direct sunlight for a long period of time or where the temperature could go above 60°C.


# CONTENTS

<b>Important Safety Instructions .....</b>	<b>2</b>
<b>What Do I Do First? .....</b>	<b>4</b>
Make Sure These Items Arrived in the Box .....	4
<b>Controls &amp; Indicators .....</b>	<b>5</b>
<b>How Do I Put It in My Car? .....</b>	<b>7</b>
Attaching the Windshield Mount .....	7
<b>Operation .....</b>	<b>8</b>
SD Card .....	8
Plug it in, Power On/Off .....	8
Recording Mode .....	10
Photo Mode .....	14
Playback Mode .....	16
Connecting to a PC .....	16
Important Information .....	17
<b>Warranty .....</b>	<b>18</b>


# What Do I Do First?

---


## Make Sure These Items Arrived in the Box

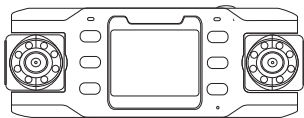

**iGO CAM 820**

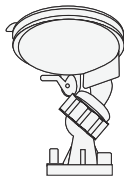

**Windshield Mount**

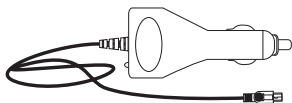

**DC (CAR) Adaptor**



**AV Cable**

 
- **Owner's Manual**







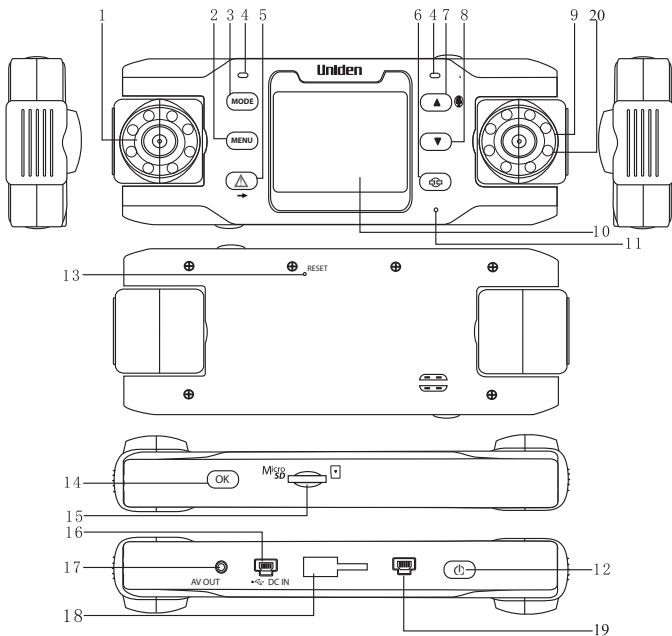

**USB Cable**

- If any item is missing or damaged, contact your place of purchase immediately. ***Never use damaged products!***
- Need help? Get answers at our website:  
***www.uniden.com.au*** for Australian model.  
***www.uniden.co.nz*** for New Zealand model.

# Controls & Indicators




Ref	Component	Description
1	<b>Front Lens</b>	Front Lens
2	<b>MENU</b>	In standby, open the Menu
3	<b>MODE</b>	Use this button to switch between various modes - Record, Photo and Playback
4	<b>LED</b>	Left - glows red when the unit is charging Right - glows red when the unit is powered on - flashes red when the unit is recording

5	<b>Protect</b> 	<ul style="list-style-type: none"> <li>In Record Mode, use this button to save &amp; lock the current recording. Protects the file from overwrite during loop recording.</li> <li>In Menu Mode, use this button to select the next (right) menu.</li> </ul>
6	<b>SWITCH</b> 	Use this button to switch between the lenses (front or back) to take a photo or record a video.
7	<b>UP</b>  	<ul style="list-style-type: none"> <li>In Menu list, move the cursor, one line up</li> <li>Use this button to mute audio recordings</li> </ul>
8	<b>DOWN</b> 	<ul style="list-style-type: none"> <li>In Menu list, move the cursor, one line down</li> <li>Use this button to get a full screen display.</li> </ul>
9	<b>Back Lens</b>	Back Lens
10	<b>LCD Screen</b>	LCD Screen
11	<b>Microphone</b>	Records sound
12	<b>Power</b> 	<ul style="list-style-type: none"> <li>Press and hold to switch on or off the unit.</li> <li>During power on, press to turn Infrared LEDs (night vision) on/off.</li> </ul>
13	<b>Reset</b>	If the device fails to operate properly, try resetting the device. Press the reset button by using a fine pen or paperclip.
14	<b>OK</b>	<ul style="list-style-type: none"> <li>In Record mode, press this button to start or stop video recording.</li> <li>In Photo mode, press this button to take a photo</li> <li>Press to confirm a selection in the Menu.</li> <li>Press to confirm a change in the settings.</li> </ul>
15	<b>micro SD Card Slot</b>	Use this slot to insert the SD card
16	<b>DC IN</b>	<ul style="list-style-type: none"> <li>Connect External Power &amp; charge battery</li> <li>Connect to PC for data (SD card) transfer</li> </ul>
17	<b>AV Out</b>	Connects to an external device
18	<b>Bracket Slot</b>	Fit the bracket hook of the windshield mount
19	<b>Port</b>	Not used
20	<b>LEDs:</b>	Infrared Night Vision LEDs


# How Do I Put It in My Car?

## Attaching the Windshield Mount

1. Insert the bracket hook into the bracket slot provided on the top of the unit.

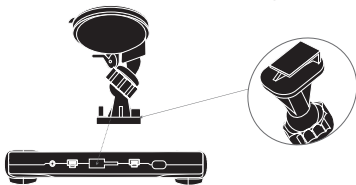

2. After inserting the hook, slide it down till it locks in position.

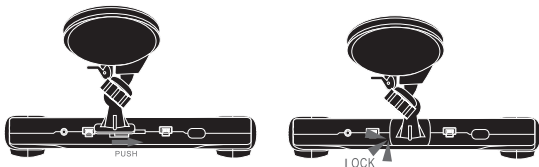


3. Press the suction cup flat against the windshield.

4. Push the suction lock up, until it snaps into place and tighten the locking collar to secure.

5. Gently pull on the mount to make sure it is secure.

It maybe a good idea to secure the power cord with cable clips so that it does not interfere while driving.

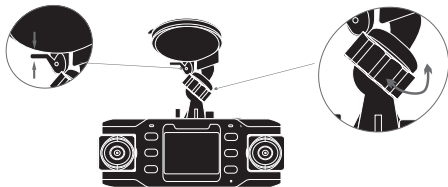

NOTE

Suction cups will not stick well on a curved/textured or wet surfaces.

# Operation

---

## SD Card



NOTE

**A compatible micro SD card is required to record and store video and photos.**

The unit can support micro SDHC cards (High Capacity SD) up to 32GB in capacity. A micro SDHC card of at least 4GB capacity and minimum Class 6 speed is recommended.

Insert a formatted micro SD card gently in the slot at the bottom of the unit. To remove the card from the slot, press the edge of the SD card inwards for it to pop out and then pull it out of the slot.

## Plug it in, Power On/Off



NOTE

When connected to a car charger with power, the unit will power on automatically, go into the record mode and start recording.

1. Connect the DC car adaptor to the power connector (USB port) found on the device.
2. Connect the other end of the DC car adaptor to your car's cigarette lighter.
3. When connected to the car charger the unit will power on automatically and start recording. When the car's engine is turned off, the unit will automatically turn off in a few seconds.

At other times, press and hold the  Power button to turn it on or off.



NOTE

Only use the DC car adaptor that comes with your device. Any other adaptor might damage the device.



## Battery Information

Although primarily designed for in-car use, the unit can operate from its built-in 800mAh battery for up to 35 minutes.

Please note, the power usage would depend on day/night recording and resolution setting.

The unit will charge the battery whenever power is detected through the USB port. When the unit is being charged, the left Red LED will glow. The LED will turn off when the unit has been charged completely.

The unit will take about 2 hours to charge completely.

## Battery Alert

The image given below indicates the battery level at different stages.



Full



Half full



Low



Empty

## Record Mode




NOTE

To record a video, ensure that a valid SD card is inserted in the given slot. Also note, that inserting/removing the SD card causes the device to shutdown.



Using the iGO CAM 820 you can record videos and take photos. To record videos, you need to ensure that the unit is in the record mode. Press MODE to switch between Record, Photo and Playback modes.

### Recording

When connected to a car charger, the unit automatically starts recording, the  record icon will start flashing on the screen.

To stop recording, press OK and the  record icon will stop flashing indicating that the recording has stopped.

### Protect Function to Protect the Current Recording

While recording, if you want to protect the current recordings, then press the  Protect button, the  lock icon will appear on the screen. This indicates that those recordings have been locked and will not be overwritten by new video clips.

## Menu Settings



NOTE

Please note, you cannot access MENU in the record mode, when the unit is recording. To access the Menu settings, you will need to stop recording by pressing OK.

Press MENU to open the Menu Settings. Use the Protect button to toggle between the various settings and display the options under them. The UP/DOWN keys can be used to scan the options, under each menu setting. Press OK to select the required option. Press MENU to exit the Menu Settings.

### MP (Record Resolution)

Set the video resolution. Choose between 720P (high resolution clarity but with larger file sizes), or VGA (standard resolution to keep file sizes small).

### RT (Video Clip Record Time)

Recordings are stored as video clips, which can be played back as a continuous recording or as individual clips. Use this option to set the time duration of each video clip between; 1min, 2mins, 5mins or Off (single recording).

### Sensor ON-OFF (Camera ON-OFF)


Select the camera(s) for recording the video clips. Turn on either one of the cameras (front or back) or both.

### Setting

The options available are listed below:

- **Bright (Brightness)**  
Choose between the following options - Auto/Sunlight/Fluorescence/Cloudysky/Tungsten - to set the condition for the recordings.
- **Exposal (Exposure)**  
Define the brightness of the recordings.
- **Colour**  
Set the background colour for the recordings.

- **Auto Detect (Motion Detect, Standby)**  
Enable this setting to allow the unit to switch to standby when no movement is detected. Eg: Stationary position.
- **Water Mark**  
Use to display or hide the date and time on the recordings.
- **Audio**  
Turn on or off the audio recording.
- **Auto Record**  
Select what happens when the unit is powered on. Select from Auto Record ON or OFF, or Charge the battery.
- **Language**  
Set the language.
- **Frequency**  
Set video frequency range; 50Hz or 60Hz.
- **Shutdown Time**  
Select a time to shutdown when unit is idle; 1min, 3mins, 5mins or OFF.
- **Key Tone**  
Have the buttons on the unit sound a tone when you press them.
- **Auto Backlight Off**  
Select a time to turn off the LCD backlight when unit is idle; 1min, 3mins, 5mins or OFF.
- **G-Sensor (Auto Protect)**  
Use this setting to activate the Collision Detection sensitivity. This saves and locks the current recording files in the event of sudden movement, such as a crash or an overturn.

When you playback the protected video clips on the unit, the  lock icon displays on the bottom of the screen.

- **TV Out**

Default TV Out setting is PAL.

- **Date Set**

Define the date and time. Use the Protect key to toggle between year/month/day or hour/minutes/seconds. Use the UP/DOWN keys to make any changes. Press OK to confirm.


- **Format**

Formats the SD card, i.e., all the data will be erased.

- **Default Setting**

Use to change back to default settings.

## Photo Mode

- Press the MODE button once to switch to the photo mode, the  photo icon will display on the top left corner of the screen.
- Now, press the OK button to take a photo.

Press the MENU button to open the Menu Settings. Press the Protect button to switch between the various settings and display the options under them. Use the UP/DOWN key to scan the options under each menu setting and then press the OK button to select the required option.

### MP (Photo Resolution)

Define the image resolution from the options given - 1M/2M/3M.

### Setting

The options available are listed below:

- **Bright (Brightness)**  
Establish different conditions to capture an image, from the available options - Auto/Sunlight/Fluorescence/Cloudysky/Tungsten.
- **Exposal (Exposure)**  
Use to darken or brighten your image from the options that range from -3 to +3.
- **Colour**  
Set the background colour for the images.
- **Water Mark**  
Use to display or hide the date and time on the images.
- **Language**  
Set the language.
- **Frequency**  
Define the frequency range. Choose between the options 50Hz and 60Hz.

- **Date Set**

Define the date and time. Use the Protect key to switch between year/month/day or hour/minutes/seconds. Use the UP/DOWN keys to increase or decrease the figures. Press OK to confirm.


- **Format**

Formats the SD card, i.e., all the data will be erased.

- **Default Setting**

Use to change back to default settings.

## Playback Mode

- Press the MODE button twice to switch to the playback mode, the  playback icon will display on the top left corner of the screen.
- Now, press the OK button to either view the latest image captured or the latest video clip. Press the UP and DOWN keys to scan through the various recordings or images.

Press the MENU button to open the Menu Settings. Press the Protect button to switch between the various settings and display the options under them. Use the UP/DOWN key to scan the options under each menu setting and then press the OK button to select the required option.

## Settings

The 2 options here are:

- **Delete file**  
Delete the recordings/images on the SD card.
- **Format**  
Format the SD card.

## Volume

Press the Protect button to switch to the Volume Setting. Use the options between 0-30 to adjust the volume of the recordings, when it is played back.

## Connecting to a PC

The iGO CAM 820 can be connected to a PC (plug the supplied USB cable into the DC IN port).

When the unit is connected to a PC, three options are displayed on the unit's screen;

USB\_Disk  
PC\_Camera  
REC\_mode

Select USB\_Disk to manage and view the SD card contents on the PC.

## Connect to an External Device

Connect the unit to an external viewing device that supports the AV IN feature via an AV cable (supplied).



# Important Information

## Solving Problems

Listed below are some of the problems and the possible solutions. If you still need help, visit our website, listed on the front cover.

General Problems	Possible Solutions
The unit cannot take photos or record videos  The unit stops automatically when recording	<ul style="list-style-type: none"><li>• Ensure that the SD card is formatted properly and inserted correctly.</li><li>• Use the recommended type of SD card (4GB Class 6)</li></ul>
Video is unclear	Ensure that there are no fingerprints or dirt on the lens. Ensure that the lens is always kept clean.
Dark images while recording water/sky	Adjust the Exposure setting.
Colour of the images is not good	Set the 'Brightness' setting to automatic.
Cross-stripe interference in an image	This is due to the light frequency. Change the light frequency depending on the local power supply.
The unit crashes	Press and hold the 'Reset' button, with a pin, to reset the unit.

# Warranty

---

## UNIDEN iGO CAM 820

**IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service**

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

**Warrantor:** The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

**Terms of Warranty:** Uniden Aust/NZ warrants to the original retail purchaser only that the iGO CAM 820 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

**Warranty period:** This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

**Parts Covered:** This warranty covers the Product and included accessories.

**User-generated Data:** This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

**Statement of Remedy:** If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

**Procedure for obtaining warranty service:** Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

**UNIDEN AUSTRALIA PTY LTD**

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Phone: 1300 366 895  
Email: [custservice@uniden.com.au](mailto:custservice@uniden.com.au)

**UNIDEN NEW ZEALAND LTD**

Service Division  
150 Harris Road, East Tamaki  
Auckland 2013  
Phone: (09) 273 8377  
Email: [service@uniden.co.nz](mailto:service@uniden.co.nz)

**Uniden®**

©2013 Uniden Australia Pty Ltd/Uniden New Zealand Limited  
Printed in PRC