

Uniden®

iGO CAM 850 **Accident CAM** **Vehicle Recorder**

For more exciting new products please visit our website:
Australia: www.uniden.com.au

OWNER'S MANUAL

Important Safety Instructions



NOTE

Uniden does not represent this product to be waterproof. Do not expose this product to Rain or Moisture.



NOTE

This product is intended for use in a motor vehicle. Don't install the device where it will block the driver's view of the road (including the mirrors!) or the deployment of the airbag.



NOTE

Keep your attention on the road! Don't try to operate or focus on any device while driving. If you have to concentrate on a device, pull off the road for a few minutes.



NOTE

Ensure that the camera lens is kept clean and there is nothing blocking the lens.



NOTE

Don't leave the device in direct sunlight for a long period of time or where the temperature could go above 60°C.

CONTENTS

Important Safety Instructions	2
What Do I Do First?	4
Make Sure These Items Arrived in the Box	4
Controls & Indicators	5
How Do I Put It in My Car?	7
Attaching the Windshield Mount	7
Operation	8
Micro SD Card	8
Plug it in, Power On/Off	9
Record Mode	10
Photo Mode	12
Playback Mode	13
Connecting to a PC	14
iGO CAM Player	14
Important Information	15
Warranty	16

What Do I Do First?

 
Make Sure These Items Arrived in the Box




iGO CAM 850



Windshield Mount

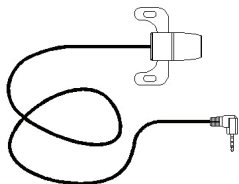

Reverse Camera

 

DC (CAR) Adaptor

 


GPS Antenna

- Owner's Manual

- If any item is missing or damaged, contact your place of purchase immediately. ***Never use damaged products!***
- Need help? Get answers at our website:
www.uniden.com.au for Australian model.

Controls & Indicators

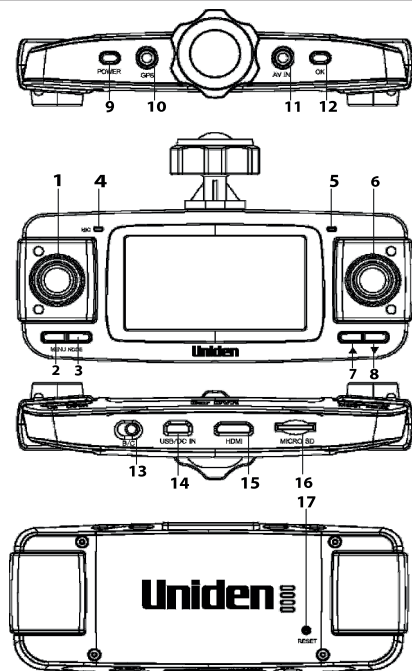


Ref	Component	Description
1	CAM A	Camera A Lens
2	MENU	In standby, open the Menu During recording, press to turn on/off the audio.
3	MODE	Use this button to switch between various modes - Record, Photo and Playback When the unit is recording, press this button to manually lock the files.
4	Microphone	Records sound

5	LED	<ul style="list-style-type: none"> glows red when the unit is powered on.
6	CAM B	Camera B Lens
7	UP ▲	<ul style="list-style-type: none"> In Menu list, move the cursor, one line up. In the Record mode, stop recording and switch between loop recording and auto detect (motion detection).
8	DOWN ▼	<ul style="list-style-type: none"> In Menu list, move the cursor, one line down. Use this button to change the LCD screen display.
9	Power	Press and hold to either switch on or off the unit. Press to turn on/off/auto set the night vision.
10	GPS Port	Use to connect the external GPS antenna (included).
11	AV IN	Connect to the Reverse Camera.
12	OK	<ul style="list-style-type: none"> In Record mode, press this button to start or stop video recording. In Photo mode, press this button to take a photo. Press to confirm a selection in the Menu. Press to confirm a change in the settings. Press and hold to turn on/off the LCD, when the unit is powered on.
13	B/R	Insert the Reverse Camera in the AV IN port, and then use this switch to change the recording from CAM A and CAM B to CAM A and Reverse camera.
14	USB/DC IN	<ul style="list-style-type: none"> Connect to External Power & charge battery. Connect to PC for data (SD card) transfer.
15	HDMI	Connect to a HDMI cable.
16	Micro SD Card Slot	Use this slot to insert the micro SD card.
17	Reset	If the device fails to operate properly, try resetting the device. Press the reset button by using a fine pen or paperclip.


How Do I Put It in My Car?

Attaching the Windshield Mount

 1. Insert the bracket hook into the bracket slot provided on the top of the unit.

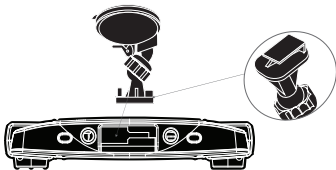

 2. After inserting the hook, slide it down till it locks in position.

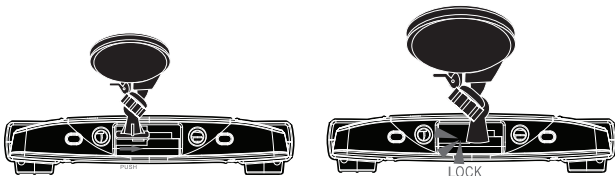


3. Press the suction cup flat against the windshield.

4. Push the suction lock up, until it snaps into place and tighten the locking collar to secure.

5. Gently pull on the mount to make sure it is secure.

 It maybe a good idea to secure the power cord with cable clips so that it does not interfere while driving.

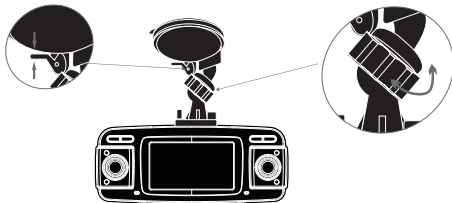

NOTE

Suction cups will not stick well on a curved/textured or wet surfaces.

Operation

Micro SD Card



NOTE

A compatible micro SD card has to be inserted before you start using the Recorder. Ensure that the unit is turned off before inserting or removing the SD card.

The unit can support micro SDHC cards (High Capacity SD) up to 32GB in capacity. A micro SDHC card of at least 8GB capacity and minimum speed of Class 10 is recommended.

Insert a formatted micro SD card gently in the slot at the bottom of the unit. To remove the card from the slot, press the edge of the SD card inwards for it to pop out and then pull it out of the slot.

It is important to format the micro SD card before using it, so as to avoid any damage to the files created on iGO CAM 850.

Uniden recommends using good quality micro SD cards.

Battery Information

Although primarily designed for in-car use, the unit can operate from its built-in 600mAh battery for up to 15 minutes.

Please note, the power usage would depend on day/night recording and resolution setting.

The unit will charge the battery whenever power is detected through the USB/DC IN port. The unit requires DC IN 5V/1000mA.

The unit will take about 2 hours to charge completely.



NOTE

Please ensure that the battery is fully charged before using it for the first time. To extend the battery life, charge the unit fully once every 3 months.

Battery Alert

The image given below indicates the battery level at different stages.



Full



Half full



Low



Empty

Plug it in, Power On/Off



NOTE



When connected to a car charger with power, the unit will power on automatically and start recording.

Connect the DC car adaptor to the power connector (USB/DC IN port) found on the device.

Connect the other end of the DC car adaptor to your car's cigarette lighter.

When connected to the car charger the unit will power on automatically and start recording. When the car's engine is turned off, the unit will automatically turn off in a few seconds.

At other times, press and hold the POWER button to turn it on or off.

When the GPS antenna is fitted into the unit  icon will display on the LCD. The  icon will display in green on the LCD when the GPS signal has been detected by the unit.



NOTE

Only use the DC car adaptor that comes with your device. Any other adaptor might damage the device.

Record Mode




NOTE

To record a video, ensure that a valid micro SD card is inserted in the given slot.

Using the iGO CAM 850 you can record videos and take photos. To record videos, you need to ensure that the unit is in the Record mode.

Press MODE to switch between Record, Photo and Playback modes. Press the UP button to switch from Loop Recording to Auto Detect (Motion Detection).

When the recording has been set to Auto Detect mode, the  icon will display on the LCD.



Recording

The unit can record from either one or both cameras. To record from CAM A or CAM B or both ensure that the B/R switch (bottom of the unit) is at B. To record from CAM A and Reverse Camera or only from Reverse Camera insert the Reverse camera plug into AV IN port and ensure that the B/R switch is at R.



The camera resolution is as shown below. Note: The Reverse camera can record only with CAM A.

	CAM A	CAM B
Resolution	1080P	1080P
	720P	720P
	VGA	VGA

	CAM A	Reverse Camera
Resolution	1080P	VGA
	720P	
	VGA	

When connected to a car charger, the unit automatically starts recording, the  icon will start flashing on the screen. To stop recording, press OK and  icon will stop flashing indicating that the recording has stopped.

GPS Antenna

To geotag your videos, insert the GPS plug into the GPS port and place the GPS Antenna on the windscreen. The  icon displays on the screen. When the unit receives the signal,  icon will display on the screen. Install the iGO CAM Player on your PC and view the recordings and trace them on the map.

Reverse Camera

Reverse Camera helps you capture lower reverse footage. Insert the Reverse camera plug into the AV IN port and slide the B/R switch, at the bottom of the unit, from B to R. The footage from the Reverse camera should now be visible on the screen.

Menu Settings



NOTE

Please note, you cannot access MENU in the record mode, when the unit is recording. To access the Menu settings, you will need to stop recording by pressing OK.

Press MENU to open the Menu Settings. Press MENU again to toggle between the various settings and display the options under them. The UP/DOWN keys can be used to scan through the options, under each menu setting. Press OK to select the required option.

Press MENU to exit the Menu Settings.


MP (Record Resolution)

Use this setting to determine the video resolution. Choose between VGA, 720P and 1080P.

Record Time

Recordings are stored as video clips, which can be played back as a continuous recording or as individual clips. Use this option to set the length of each video clip. If you choose the option 'Off' then the recorder will not loop record and the files will not be overwritten on the micro SD card.

Photo Mode

- Press the MODE button and switch to the photo mode, the  icon will display on the top left corner of the screen.
- Now, press the OK button to take a photo.

MP (Photo Resolution)

Define the image resolution from the options given - 1M/2M/3M.


Setting (System Settings)

These settings are available under the Record mode and Photo mode, unless specified otherwise.

Item	Description
Brightness	Use this option to define the condition for the recordings/images.
Exposure	Set the brightness sensitivity
Colour	Set the background colour.
Auto Detect (Motion Detection) (Record Mode only)	Enable this setting to allow the recorder to start recording when it detects movement.
Water Mark	Displays or hides the date and time in the recordings.
Audio (Record Mode only)	Turn on or off to include sound in the recordings.
Auto Record (Record Mode only)	When enabled the recorder starts recording automatically when powered on.
Language	Set the language.
Frequency	Set the frequency.
Time Zone Selection	Set the relevant time zone.
Night Vision	Set to enable the recorder to detect low light conditions and turn on the Night Vision LEDs.

LCD Standby	Set to automatically turn off the LCD after the recording starts.
Key Tone	Have the keys sound a tone when you press them.
G Sensor Sensitivity	This functions helps protect/lock video files in case of a sudden event.
Shut Down	Enable or disable the recorder to shut down when idle.
TV Out (Record Mode only)	Use to connect the recorder to a TV.
GPS Time Syn (Record Mode only)	Auto sets the time when the unit detects GPS signal.
Date & Time	Use to manually set the date and time.
Format	Format the micro SD card.
Default Setting	Restore the system back to the factory settings.
S/W Version	Software information.

Playback Mode

- Press the MODE button and switch to the playback mode, the  playback icon will display on the top left corner of the screen.
- Now, press the OK button to either view the latest image captured or the latest video clip. Press MODE to exit the current recording.
- Press the UP and DOWN keys to scan through the various recordings or images.

Press MENU to open the Settings.

- **Delete file**
Delete the recordings/images on the SD card.

Connecting to a PC

The iGO CAM 850 can be connected to a PC (plug the USB cable (not supplied) into the DC IN port).

When the unit is connected to a PC, three options are displayed on the unit's screen;

USB_Disk
PC_Camera
REC_mode

Select USB_Disk to manage and view the SD card contents on the PC.

Open the contents of the SD card on the PC, to view the DCIM folder. Double click on the DCIM folder to open the folders CRECA, CRECB and CRECR.

The folder CRECA will contain all the recordings/images for CAM A and CRECB for CAM B and CRECR for the Reverse camera. Double click on CRECA/ CRECB to open it and reveal the LOCK folder and the recording/ images.

All the locked files (i.e., files that will not be overwritten) are saved in the LOCK folder. The other files (i.e., files that will be overwritten/not locked) are displayed outside the LOCK folder.

iGO CAM Player

iGO CAM Player allows you to view the videos recorded on the iGO CAM 850 and trace them on a map. For the mapping to work, please ensure your PC is connected to the internet.

Download the iGO CAM Player

Visit the Uniden website (www.uniden.com.au) to download the iGO CAM Player and save it to the local disk on your PC.

View the Recorded Files

To view the recorded files on the iGO CAM Player, once unzipped, double click on the player's .exe icon and the player will show up. Browse for your recorded files and open them on the Player to view and trace the map.

Important Information

Solving Problems

Listed below are some of the problems and the possible solutions. If you still need help, visit our website, listed on the front cover.

General Problems	Possible Solutions
The unit cannot take photos or record videos The unit stops automatically when recording	<ul style="list-style-type: none">• Ensure that the SD card is formatted properly and inserted correctly.• Use the recommended type of SD card (8GB Class 10)
Video is unclear	Ensure that there are no fingerprints or dirt on the lens. Ensure that the lens is always kept clean.
Dark images while recording water/sky	Adjust the Exposure setting.
Colour of the images is not good	Set the 'Brightness' setting to automatic.
Cross-stripe interference in an image	This is due to the light frequency. Change the light frequency depending on the local power supply.
The unit crashes	Press and hold the 'Reset' button, with a pin, to reset the unit.

Warranty

UNIDEN iGO CAM 850

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”).

Terms of Warranty: Uniden Aust warrants to the original retail purchaser only that the iGO CAM 850 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Phone: 1300 366 895

Email: custservice@uniden.com.au

Uniden®

© 2015 Uniden Australia Pty Limited. Printed in PRC.