

# Uniden®

## UPP136 Portable Power Bank & Jump Start Kit



### FEATURES

- 13600mAh Capacity
- Universal 12V clamps
- Supports Engines  
< 5.0L Petrol  
< 3.0L Diesel
- USB Port 5V/2.1A Port
- LED Flashlight
- Laptop Connector
- AC/DC Chargers
- Resting Discharge  
– 20% Loss/Year
- Carrying Case

## WHAT'S INCLUDED

- UPP136 portable power unit
- 8 pcs laptop charging connector with charger leads
- 2-1 USB connector (Micro, Mini)
- Smart Jumper Cable adaptor
- 12-15V DC cigarette lighter adaptor (vehicle adaptor)
- 15V/1.0A AC Adaptor

## SLIDE ON THE POWER SWITCH BEFORE YOU DO THE FOLLOWING:

Charge the unit

- Charge the USB device
- Charge DC12V/16V/19V device
- Use the Flashlight
- Use the Air Pump (Not Included)

## USING THE UPP136 POWER BANK

### CHARGING THE UNIT

1. Use the 240V AC Adaptor to connect the unit to an AC home outlet or the cigarette lighter adaptor to connect the unit to the vehicle's cigarette lighter socket.
2. Slide ON the POWER switch to monitor charging progress on the screen. The display shows 100% when charging is complete.
3. Disconnect the UPP136 from the AC adaptor.

***To preserve battery life, fully charge the Power Bank every three months.***

### CHECK BATTERY CAPACITY

1. Slide ON the POWER switch.
2. Press POWER button without any devices connected to the charger.

3. The number of bars in the battery icon indicate the power in the battery.

## JUMP START A VEHICLE

1. Slide ON the POWER switch and make sure the Power Bank is fully charged.
2. Turn off all accessories on the vehicle (radio, air conditioner, etc)
3. Connect the jumper cable's RED clamp to the POSITIVE post of the vehicle battery.
4. Connect the jumper cable's BLACK clamp to the NEGATIVE post of the vehicle battery.
5. Insert the jumper cable connector into the Power Bank's 12V connector (under flap). Be sure the connection is solid.
6. Turn the vehicle ignition key for 3 seconds only. If the vehicle starts:
  - Disconnect the jumper cables from the power pack first, then disconnect the clamps from the battery.
  - Leave the ignition on for a few minutes, then turn off the vehicle.
  - Start the car.
7. If the car does NOT start on the first try, wait for a minute and try again.

## CHARGING A 5V USB DEVICE (TABLET, CELL PHONE, ETC.)

1. Slide ON the POWER switch. Connect 2-1 USB connector to the UPP136.
2. Connect your device to either the miniUSB or microUSB cable.
3. The UPP136 begins to charge your device.

## TURN ON FLASHLIGHT

1. Slide ON the POWER switch. Press and hold POWER button to turn on the LED flashlight in steady mode.
2. Press POWER button again to cycle through the 4 modes: Steady,

Slow Strobe, Fast Strobe, and OFF.

## CHARGE DC12V/16V/19V DEVICES

Slide ON the POWER switch. Press POWER button to select the desired output voltage (DC 12V/16V/19V). Insert a connector cable (not included) to DC Output 2 to charge the desired device.

## MAINTENANCE

Use common sense when caring for your UPP136. Be sure the connectors and jacks remain clean and free of debris. Unplug the UPP136 after charging. Slide OFF the POWER switch and store the UPP136 and its accessories in the carrying case provided.

## BATTERY DISPOSAL

The battery is self-contained and not consumer replaceable. The battery must be disposed properly when it no longer holds a charge. Proper charging practices will increase the life of the unit.

## TROUBLESHOOTING

IF...	TRY THIS...
My items are not recharging/ inflating.	<ul style="list-style-type: none"> <li>• Recharge the UPP136.</li> <li>• Verify that your items are connected correctly.</li> </ul>
I haven't used my UPP136 in a while, and now the unit is completely drained.	You may have accidentally put it away with it powered on. Recharge it.

## USING THE AIR PUMP (OPTIONAL ACCESSORY)

The air pump accessory comes equipped to pump air into car tires.

**Do not use the air pump longer than 15 minutes at a time. Let it cool down after 5 minutes of continuous use.**

1. Connect the appropriate air needle adaptor to the air pump, if needed.

2. Connect the air hose to the item to inflate.
3. Connect the air pump's power plug to the Power Bank's 12V Connector (under flap).
4. Press the green power button on the air pump. Monitor the gauge to be sure not to overinflate your item. Stop inflating your item occasionally to check the air pressure.
5. Press the green power button again when the item is inflated to turn off the air pump.

## SPECIFICATIONS

<b>Power Bank</b>	
Operating Temperature	- 20° ~ + 60° C
Start Current	250A
Peak Current	500A
Capacity	13600mAh/50.32WH
Cycle life	1,000 times
Charge mode	DC 15V 1A
USB output	5V 2A
DC Output	12V

<b>Air Pump ( Optional Accessory)</b>	
Power Input	12V DC
Maximum Pressure	80 PSI
Maximum Current	4A
Unloaded Current	<2.5A
Inflating Speed	Less than 10 minutes to inflate tire from 0 to 30 PSI based on tire size 195/55R15.
Working Temperature	-10° ~ +60° C
Dimensions	10.8 X 9.5 X 4.7 cm

## **ONE-YEAR LIMITED WARRANTY**

### **UPP136**

**IMPORTANT Satisfactory evidence of the original purchase is required for warranty service**

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

### **Warrantor**

The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498.

### **Terms of Warranty**

Uniden Aust warrants to the original retail purchaser only that the UPP136 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

### **Warranty Period**

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

### **Parts Covered**

This warranty covers the Product and included accessories.

### **User-generated Data**

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

### **Statement of Remedy**

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

### **Procedure for Obtaining Warranty Service**

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

### **UNIDEN AUSTRALIA PTY LTD**

Phone number: 1300 366 895

Email: [custservice@uniden.com.au](mailto:custservice@uniden.com.au)