

Uniden[®]

App Cam Solo⁺

Quick Start Guide

What's in the Box



App Cam Solo+
Camera
x1



Rechargeable
Battery
x1



Silicone Weatherproof
Cover
x1



Flat Mount
x1



Screw Mount
x1



Mounting Strap
x1



Reset Needle
x1



Screw Kit
x2



Mounting Template
x2



Power Cable
x1

The camera and the rechargeable battery are packed separately in the same package.

Please dress the camera with the Silicone Cover for better weatherproof performance when you install the camera outdoors.

Twin Pack includes 2 single packs of AppCam Solo+.


Triple Pack includes 3 single packs of AppCam Solo+.

Quad Pack includes 4 single packs of AppCam Solo+.

Optional Accessories



Solar Panel
(SPS-01)
x1

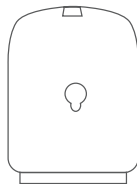

Battery Pack
(BPS-01)
x1

Visit the App Cam Solo+ page on the website for more information on the availability of optional accessories:

www.uniden.com.au for Australia

General Introduction

Micro SD Card Slot

Reset Button

Daylight Sensor

Lens

Status LED

Built-in Mic

Built-in PIR Motion Sensor

Speaker



Red LED (WiFi connection failed)

Blinking: Standby status

On: Working status

Blue LED (WiFi connection succeeded)

Blinking: Standby status

On: Working status

Install the Rechargeable Battery to the Camera



Please press the button (on the top of the back housing), and slide the back housing downward to close it. The button needs to be closed firmly for ultimate weatherproof performance.



For weatherproof performance, always cover the charging port with the rubber plug

Charge the Battery

1. You can charge the battery when it's installed to the camera.
2. You can charge the battery separately.
3. You can charge the battery with Uniden Solar Panel (SPS-01).

Please note that the solar panel is NOT included in the package.

LED Battery Status

There is a status LED under the micro USB port of the battery, indicating the battery charging status.

- Green LED: Fully charged
- Red LED: Charging



Important Safeguards on Battery Use

1. Please charge your rechargeable battery with a standard and high-quality DC5V battery charger.
2. If you want to power the camera via solar panel, please note that the camera is **ONLY** compatible with Uniden Solo Panel (SPS-01). You cannot charge the battery with other solar panel brands.
3. Please charge the battery in temperature between 0°C and 45°C



Important Note



Uniden App Cam Solo+ is not designed for 24/7 full capacity running or around-the-clock live streaming. It's designed to record motion events and remotely view live streaming only when you need it.

Please note that a fully charged battery will support up to 180 days in standby mode, or 960 minutes (IR LEDs off in daytime) of motion triggered recording and live view.

Install Uniden Solo App


There are two ways to get the Uniden Solo App:

- Search “Uniden Solo” in App Store (for iOS), download and install the app.
- Search “Uniden Solo” in Google Play (for Android), download and install the app.

Set up the Camera

Please follow the prompt tone to configure the camera


“ Camera has been started up. Please run app, add the camera and set it up. ”

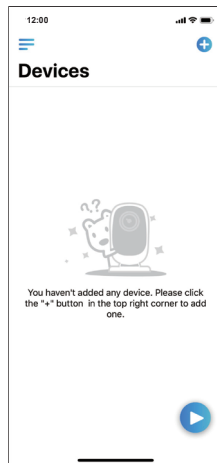

1. Please click the “+” button in the top right corner to add the camera.




2. Scan the QR code on the back of the camera.

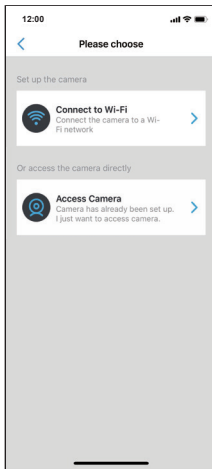


3. Click "Connect to Wi-Fi" to continue.

Note:
When the setup for the camera is completed, your family can access the camera simply by clicking "Access Cameras" without reconfiguring it.

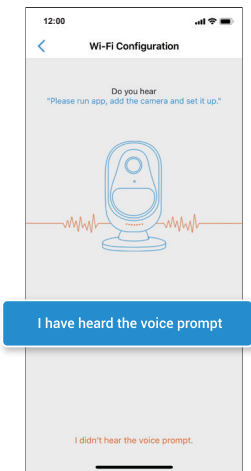


4. Click the button "I have heard the voice prompt" to enter the next page.

If you did not hear the voice prompt, please press "I did not hear the voice prompt" for help.

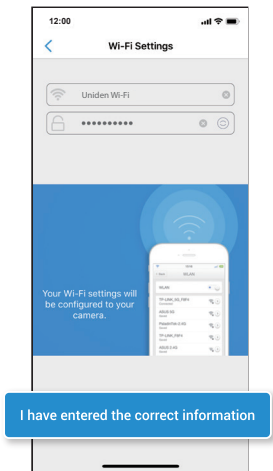


5. Enter the Wi-Fi password of the selected Wi-Fi network and press "I have entered the correct information" to enter the next page.

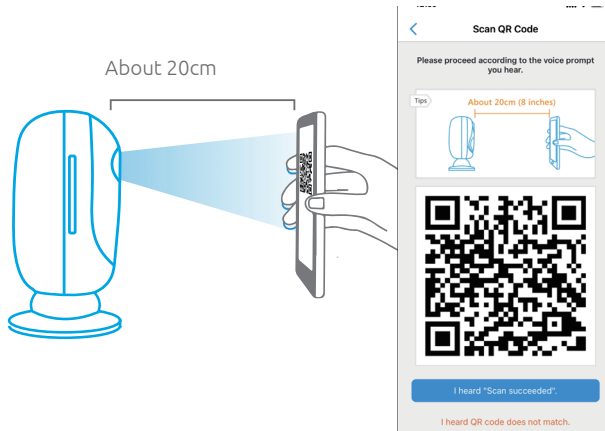

“ Scan succeeds. Camera is connecting to the router. Please wait. ”

6. A QR code will be generated on the phone. Please place the QR code on your phone towards App Cam Solo+ camera' lens at a distance of about 20cm to let the camera scan the QR code. Please make sure that you've ripped the protection film of the camera's lens.

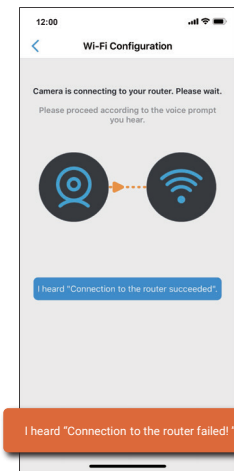



“ Connection to the router failed! ”

7. If you hear the above voice prompt, please press “I heard ‘Wi-Fi connection failed’ ” for help.



“ Connection to the router succeeded. ”

8. If you hear the above voice prompt, please press “I heard ‘Connection to the router succeeded.’ ” to finish the quick setup.

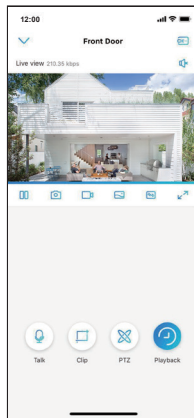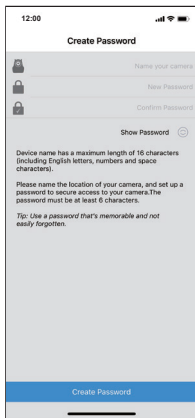


9. Name your camera and create a password (at least 6 characters), tap “Create Password”, slide the page to read the tips and tap “finish” to start the Live View. Tap ✓ to go to the “Devices” menu.


Note:

“Name your camera” field refers to the display name of the camera rather than the login username. “Playback” only displays when you’ve inserted a micro SD card into the camera. Make sure that the SD card is recognized by the camera.

10. Please tap the camera and follow the steps to sync the time, and then start live view or go to "Device Settings" for more configurations.

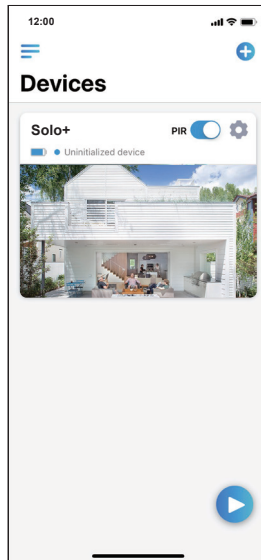

Device Menu

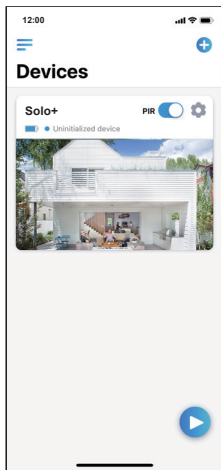

Menu



Add New Device



Enable/Disable PIR Motion Sensor
(the PIR sensor is enabled by default)



Device Settings




Access Live View



Battery Status

Adjust the Detecting Distance of the PIR Sensor

The default sensitivity of the PIR sensor is at “Mid” and the detecting distance is 6 meters. If you want to adjust the sensitivity, please launch your Uniden Solo App, and then click “Device Settings” -> “PIR Settings” and click the “save” button to save the settings.

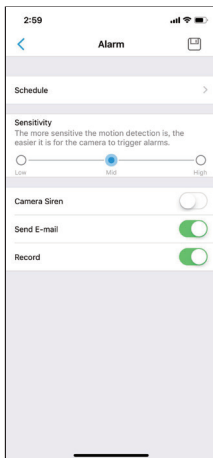

Sensitivity	Detecting Distance (For moving and living things)	Detecting Distance (For moving vehicles)
Low	Up to 4 meters	Up to 10 meters
Mid	Up to 6 meters	Up to 12 meters
High	Up to 9 meters	Up to 15 meters

Note:

Higher sensitivity offers longer detecting distance, but it would lead to more false alarms.

You are advised to set up the sensitivity level to “Low” or “Mid” when you install the camera outdoors.



Important Notes for Reducing False Alarms

For reducing false alarms, please note that:


- Do not install the camera facing any objects with bright lights, including sunshine, bright lamplights, etc.
- Do not place the camera too close to a place where there are frequently moving vehicles. The recommended distance between the camera and the vehicle is 15 meters
- Stay away from the outlets, including the air conditioner vents, humidifier outlets, the heat transfer vent of projectors, etc.
- Do not install the camera facing the mirror.
- Keep the camera at least 1 meter away from any wireless devices, including Wi-Fi routers and phones in order to avoid wireless interference.

Cover the Monitoring Area

When installing the camera, it's not suggested to make the PIR sensor vertically face the moving object. Please note that if the moving object approaches the PIR sensor vertically, the PIR sensor may not detect the motion events. You are advised to install the camera angularly (the angle between the PIR sensor and the detected object is larger than 10°) for effective motion detection.


For reference:

- The PIR sensor's detecting distance: 6m (by default)
- The PIR sensor's detecting angle: 120° (H)

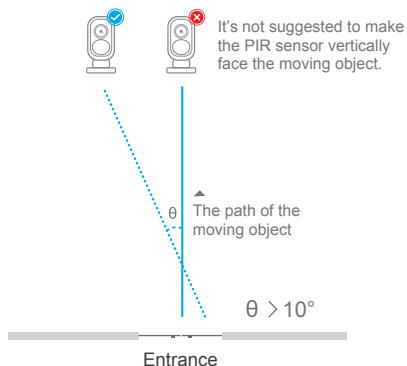


The Ideal Viewing Distance

The ideal viewing distance is 2-10 meters, which enables you to recognize a human.

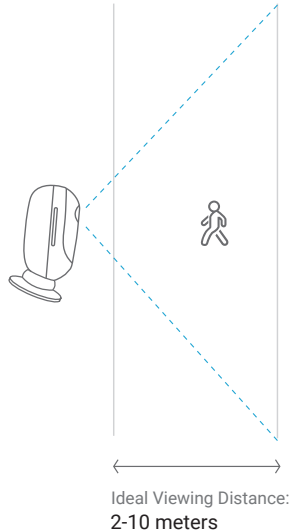


How to Install the Skin to the Camera


Please dress the camera with the skin for better weatherproof performance when you install the camera outdoors.

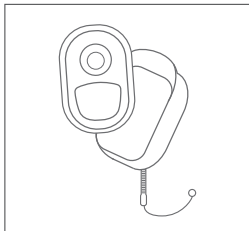

Step 1
Please dress the App Cam Solo+ camera with the silicone cover provided in the package.

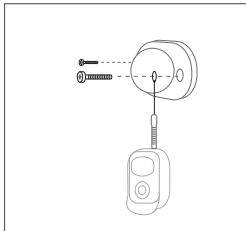


Step 2
The cover has an anti-falling safety rope. Please fasten the other end of the rope to the wall mount when mounting it to the wall.

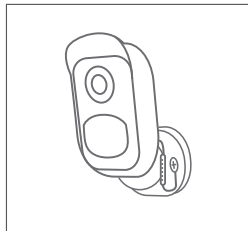


Step 3
Stick the camera on the wall mount and twist the camera in any directions you want.


How to Install Wall Mount

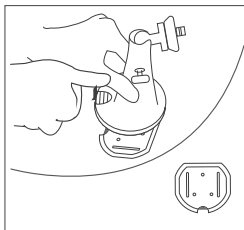


Step 1
Press the button to release the plate from the screw mount.

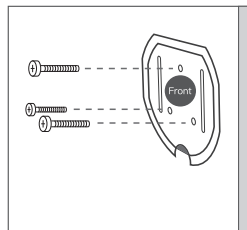


Step 2
Screw the security mount plate into the wall.

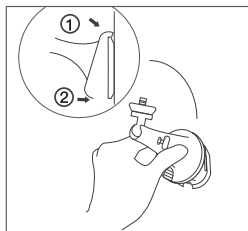

Step 3
Latch the security mount on its plate
(Make sure the top edge of the backing plate is inserted into the mount.)

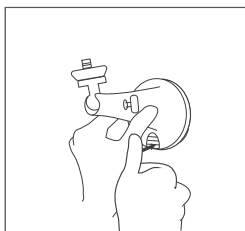


Step 4
Press the security mount button
until its plate clicks into the mount.

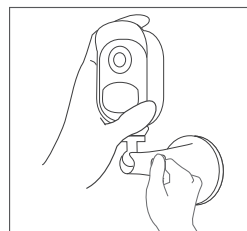


Step 5
Screw the camera, adjust its direction
and tighten the knob to fix it.


Tree Mount

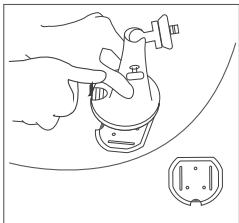


Step 1
Press the button to release the plate from the screw mount.

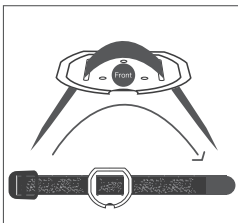


Step 2
Thread the hook & strap through the slots.

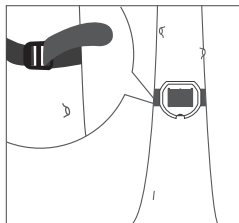


Step 3
Fasten the warp strap to the tree.

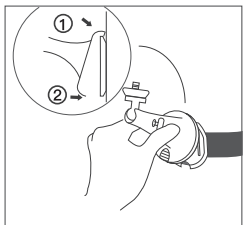

Step 4
Latch the security mount on its plate
(Make sure the top edge of the backing plate is inserted into the mount.)

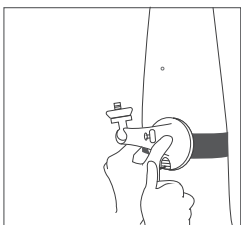


Step 5
Press the security mount button
until its plate clicks into the mount.

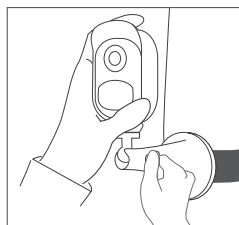


Step 6
Screw the camera, adjust its direction
and tighten the knob to fix it.

How to Remove the Camera

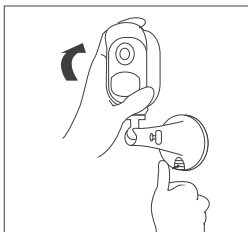

Step 1
Press the security mount button
to pull the mount out.

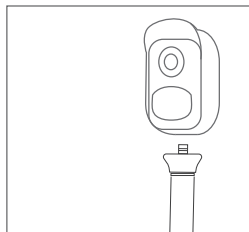

Step 2
Unscrew the camera from the
screw mount.

WARRANTY

Uniden App Cam Solo+

Important:

Satisfactory evidence of the original purchase is required for warranty service. Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor:

The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust").

Terms of Warranty: Uniden Aust warrants to the original retail purchaser only that the Uniden App Cam Solo+ Single/Twin/Quad Pack ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire, as indicated below, from the date of original retail sale.

Product	1 Year
Accessories and Battery	90 Days

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- A. Damaged or not maintained in a reasonable manner or as recommended in the relevant Owner's Manual;
- B. Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- C. Improperly installed contrary to instructions contained in the relevant Owner's Manual
- D. Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- E. Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Phone number: 1300 366 895

Email address: custservice@uniden.com.au

THANK YOU FOR BUYING A UNIDEN PRODUCT

© 2018 Uniden Australia Pty Limited v1.1
Printed in PRC